Typical Modes of Operation for HEPA-AIRE Portable Air Scrubbers



NECATIVE PRESSURE MODE #1
Unit is located inside the contaminated of
Contaminated air is placed by the PAS, a
the filtered air is then exhausted to the
outside via dacting.

HOGATIVE PRESSURE MODE #2 Unit is located outside the contaminated area. Contaminated air is drawn into the intake of

d area.

From the column to th

| | 1407 101.41 |
|-------|----------------|
| CHRON | CONTAMBLET MEA |
| ŢŢŢŢ | |
| | |

POSITIVE PRESSURE MODE
Unit is located outside the containment area.
Air planes by the Mail is exhausted to the
clean area via distring.
Settling the mail is exhausted to the
clean area via distring.
Settling the mail is replicably used to
protect contition outplanes or continuous to
the mail information of containment is

RECIRCULATION MODE
Unit is incated inside the containment zero.
Contaminated air is filtered by the RKS, and
the filtered air is returned to the space in a
continuous cycle. This mode does not affect
new presountation.

